

Hold the stylus with pen portion facing up




Take a firm grip of the top base and bottom base




Twist counter clockwise while pulling (Pulling and pushing back in may take a bit of force)



Removing bottom should reveal refillable pen

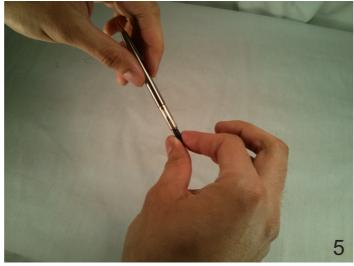

Twist counter clockwise to remove refillable pen

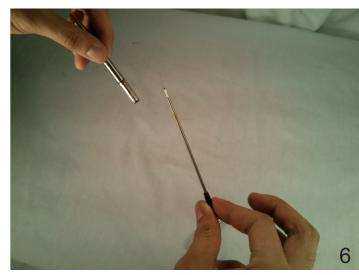

Once removed, replace with new cartridge and reassemble