



CR6SD-** Termination Instructions

1. Cut & Remove about 1.5" of Jacket from the Cable
2. Cut off all cable filler and or divider
3. Untwist wire pairs and straighten wires
4. Arrange wires in proper sequence (568B – White/Orange, Orange/White, White/Green, Blue/White, White/Blue, Green/White, White/Brown, Brown/White)
5. Cut end of wires at sharp angle to make it easier to install load bar
6. Slide load bar over wires as shown below

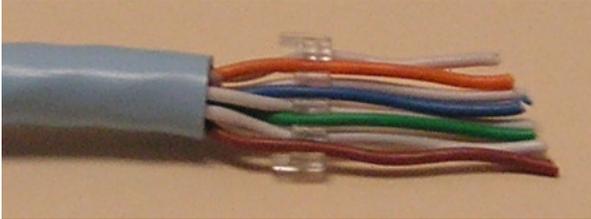

7. Cut wire to about ¼" past load bar

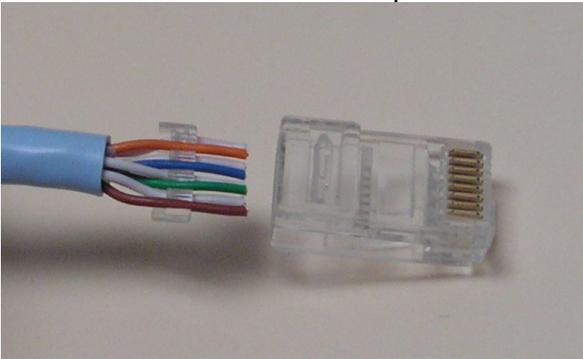

8. Insert wires in to connector and crimp

